

ROLLS

PS16 POWER CENTER Personal Monitor Power Supply Signal Distribution



READ THIS MANUAL FOR IMPORTANT OPERATION INSTRUCTION. TIP-RING-SLEEVE PLUGS ARE REQUIRED FOR THE OUTPUTS OF THIS UNIT.


Owners Manual

PS16 POWER CENTER

The PS16 supplies the DC power and distributes the Monitor signal to up to ten of the PM50s, the PM55, and the PM351 units. This dramatically increases efficiency and eliminates the need for multiple wall-warts and adapter cables.

- Supplies power for up to ten PM50s, PM55, and PM351 units.
- Directly supplies a monitor signal to the above listed units.
- Unbalanced 1/4" and TRANSFORMER-balanced XLR inputs.

PS16 PM Power Center

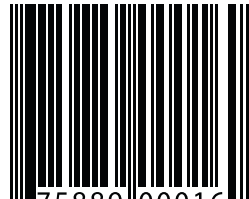

ROLLS

Rolls Corporation
Salt Lake City, UT
12/10



